STABLE F7

Firmware Target:EXF722DUAL

Manual V1.0

How to connect the receiver?

Frsky XM+ Receiver



Frsky R-XSR Receiver

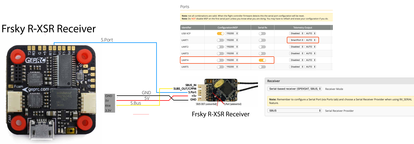

Frsky R9mm Receiver

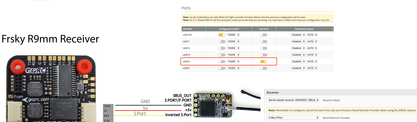

TBS Crossfire Nano RX

DSM/DSMX

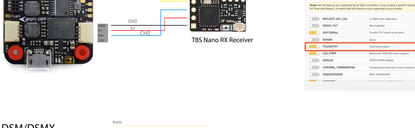

Flysky FS-RX2A(IBUS)

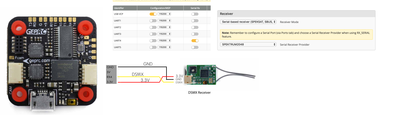

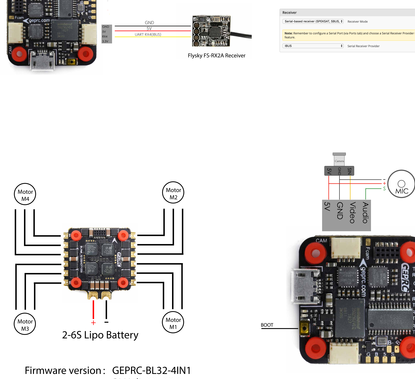

Firmware version： GEPRC-BL32-4IN1
BLHeli_32_32.6

4IN1 ESC

CAMERA & MIC

How to connect the LED/BUZZER?

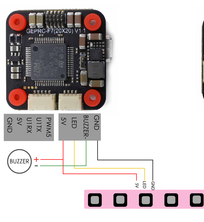

How to connect the VTX?

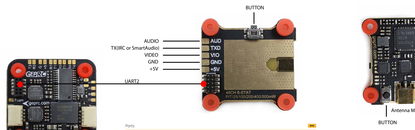

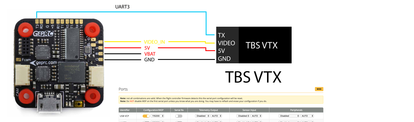

Official website
www.geprc.com

Manual
geprc.com/support

facebook
facebook.com/geprc

instagram
instagram.com/geprc